



Model  
SW3065  
SW4100  
SW5125

# SW SERIES 2

OIL FIRED DIRECT EXHAUST  
CAST IRON BOILER

## INSTALLATION, OPERATION & MAINTENANCE MANUAL



Tested For 75 psig  
ASME Working Pressure





An ISO 9001-2008 Certified Company

Manufactured by:

**ECR International, Inc.**  
2201 Dwyer Avenue, Utica NY 13501  
web site: [www.ecrinternational.com](http://www.ecrinternational.com)

P/N# 240009678, Rev. A [09/2012]

## DIMENSIONS

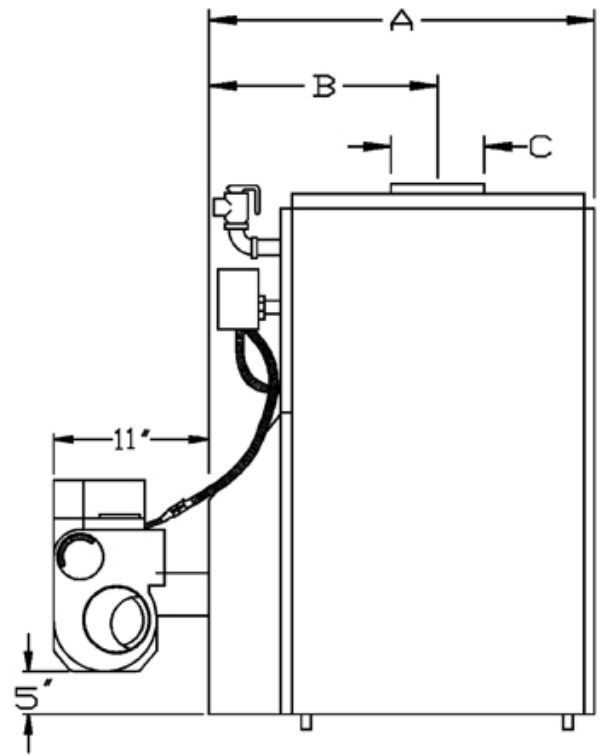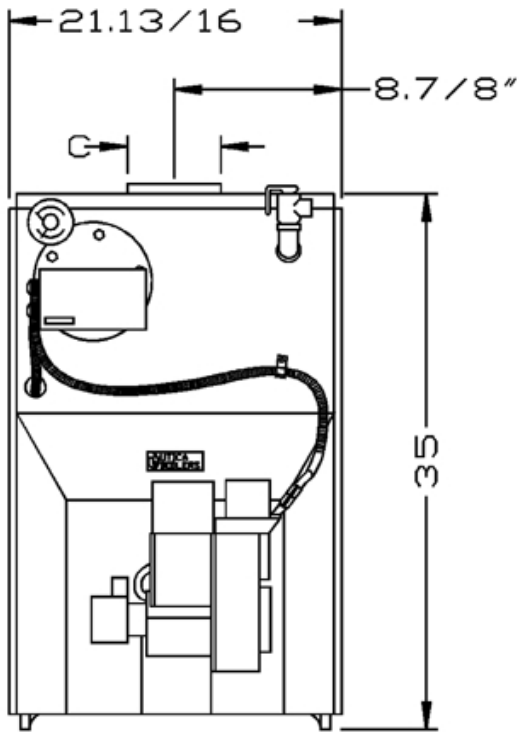

| BOILER NO. | A<br>LENGTH OF FLUSH JACKET | B<br>FRONT OF CASTING TO CENTER LINE OF FLUE OUTLET | C<br>DIAMETER OF FLUE OUTLET |
|------------|-----------------------------|-----------------------------------------------------|------------------------------|
| SW3065     | 17 7/8"                     | 11 1/4"                                             | 4"                           |
| SW4100     | 21 1/2"                     | 12 5/8"                                             | 4"                           |
| SW5125     | 25 1/8"                     | 14 1/4"                                             | 4"                           |

## TABLE OF CONTENTS

|                                                                              |    |
|------------------------------------------------------------------------------|----|
| Dimensions.....                                                              | 2  |
| Safety Symbols .....                                                         | 3  |
| Installation .....                                                           | 4  |
| Connecting Supply And Return Piping .....                                    | 5  |
| Recommended Piping For Boilers Equipped With A P3 Or T4 Tankless Heater..... | 9  |
| Options Utilizing 3/4" Tapping .....                                         | 10 |
| Oil Tank And Piping .....                                                    | 11 |
| Electrical Wiring .....                                                      | 12 |
| Sequence Of Operation.....                                                   | 14 |
| Operating Instructions.....                                                  | 15 |
| Instructions To Obtain Proper Operation Of The Boiler-Burner Unit .....      | 16 |
| Preventive Maintenance.....                                                  | 17 |
| Instructions For Opening And Closing Burner Swing Door .....                 | 17 |
| Ratings and Data.....                                                        | 18 |
| Service Check List .....                                                     | 19 |

### KEEP THIS MANUAL NEAR BOILER RETAIN FOR FUTURE REFERENCE

**IMPORTANT:** Read the following instructions **COMPLETELY** before installing.

#### Safety Symbols & Warnings

The following defined symbols are used throughout this manual to notify the reader of potential hazards of varying risk levels.

#### **DANGER**

Indicates a hazardous situation which, if not avoided, **WILL** result in death or serious injury

#### **WARNING**

Indicates a hazardous situation which, if not avoided, could result in death or serious injury.

#### **CAUTION**

Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.

#### **NOTICE**

Used to address practices not related to personal injury.

Boiler installation shall be completed by qualified agency.

#### **WARNING**

Keep boiler area clear and free from combustible materials, gasoline and other flammable vapors and liquids.

DO NOT obstruct air openings to the boiler room. Modification, substitution or elimination of factory equipped, supplied or specified components may result in personal injury or loss of life.

TO THE OWNER - Installation and service of this boiler must be performed by a qualified installer.  
TO THE INSTALLER - Leave all instructions with boiler for future reference.

#### **WARNING**

Fire, explosion, asphyxiation and electrical shock hazard. Improper installation could result in death or serious injury. Read this manual and understand all requirements before beginning installation.

#### **NOTICE**

When this product is installed in the Commonwealth of Massachusetts installation must be performed by a Licensed Plumber or Licensed Gas Fitter.

## INSTALLATION

### **WARNING**

Improper installation, adjustment, alteration, service or maintenance could result in death or serious injury.

#### **Installation**

Installation shall conform to requirements of authority having jurisdiction or in the absence of such requirements, NFPA 31: Installation Code for Oil Burning Equipment.

Where required by authority having jurisdiction, installation shall conform to standard for Controls and Safety Devices for Automatically fired boilers, ANSI/ASME CSD-1.

Locate boiler in front of final position before removing crate. Provide level solid base as near to vent outlet as possible and centrally located with respect to heat distribution system as practical.

Allow 24 inches in front and top for servicing and cleaning, or removing tankless water heating coil.

When installed in utility room, door should be wide enough to allow largest boiler part to enter, or permit replacement of another appliance such as water heater.

### **WARNING**

Fire hazard. Do not install boiler on combustible flooring or carpeting. Failure to follow these instructions could result in death or serious injury.

#### **FOR INSTALLATION ON NON-COMBUSTIBLE FLOORS ONLY**

- The boiler must not be installed on carpeting or vinyl flooring. Minimum clearances to combustible construction are:

#### **Minimum clearances to combustible construction are:**

|                             |         |
|-----------------------------|---------|
| TOP .....                   | 0 IN.   |
| FRONT ....                  | 24 IN.* |
| FLUE CONNECTOR .....        | 2 IN.   |
| REAR .....                  | 6 IN.   |
| LEFT SIDE .....             | 0 IN.   |
| RIGHT SIDE.....             | 0 IN.   |
| * "FOR ALCOVE INSTALLATION" |         |

Recommended clearance for service access should exceed fire protection clearance.

|                      |        |
|----------------------|--------|
| TOP .....            | 24 IN. |
| FRONT .....          | 24 IN. |
| FLUE CONNECTOR ..... | 9 IN.  |
| REAR .....           | 6 IN.  |
| LEFT SIDE .....      | 10 IN. |
| RIGHT SIDE.....      | 6 IN.  |


Remove crate and plastic protective wrapper and inspect for damage.

Our responsibility ceases upon delivery of the crated boiler to the carrier in good condition. Any claims for damage or shortage in shipment must be filed immediately against carrier by consignee. Move boiler to permanent position by sliding or walking.


## CONNECTING SUPPLY AND RETURN PIPING

Circulators in following illustrations are mounted on system supply side, mounting on system return side is also acceptable practice.

**Figure 1 - Typical Installation Using Circulators**

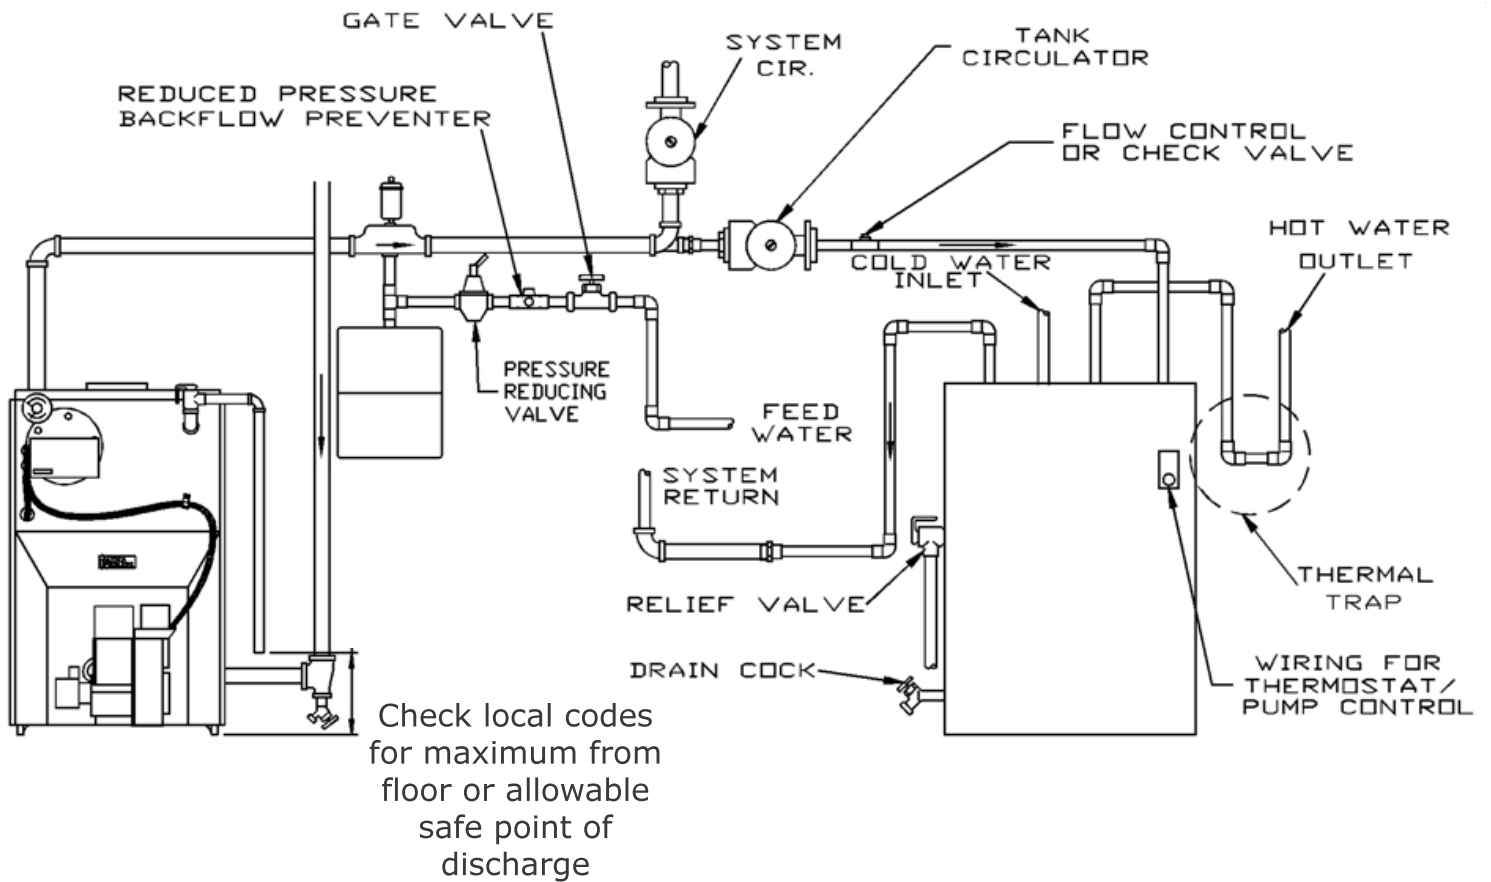


**Figure 2 - Typical Installation Using Zone Valves**

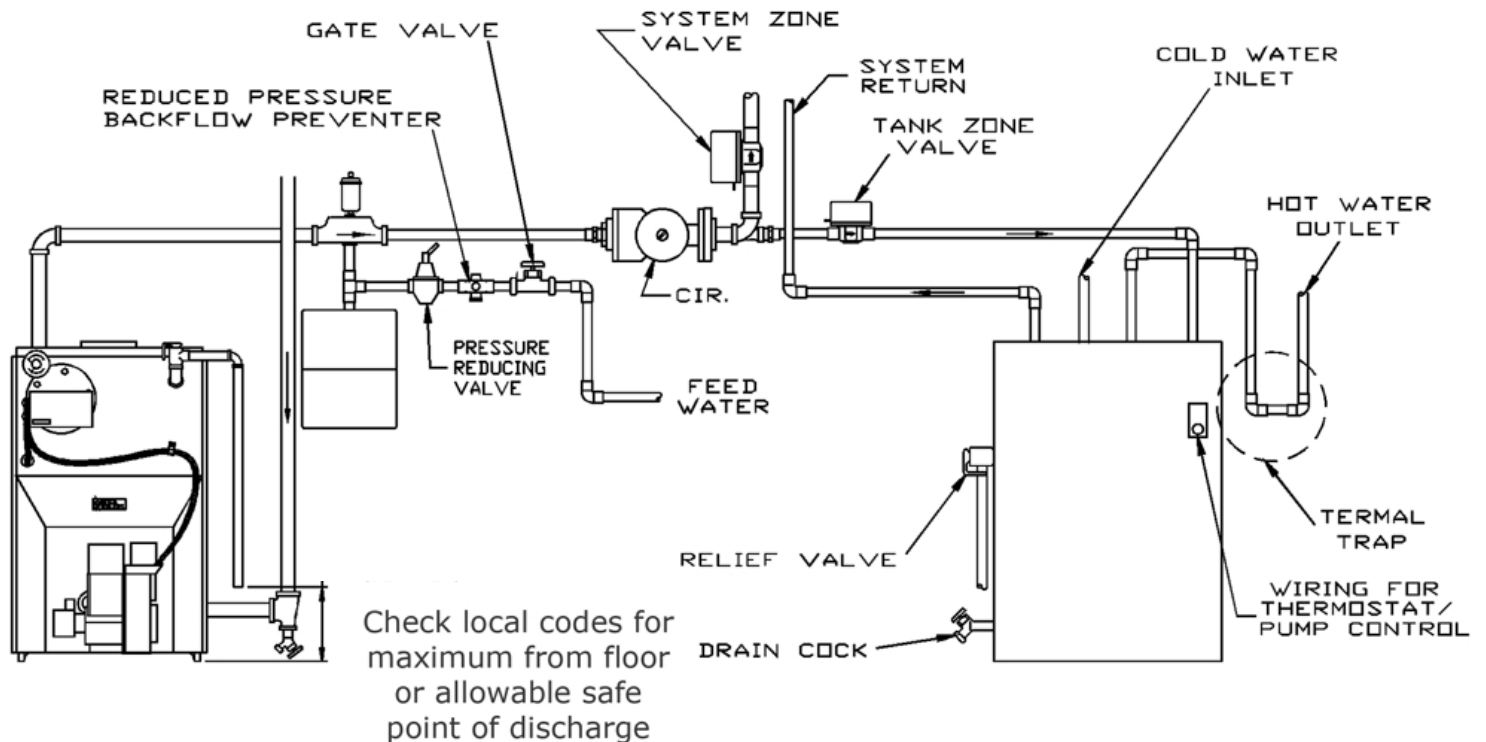

## CONNECTING SUPPLY AND RETURN PIPING

1. Typical installation using circulators shown in **Figure 1**.
2. Typical installation using zone valves shown in **Figure 2**.
3. Hot water boilers installed above radiation level must be provided with low water device either as part of boiler or at time of boiler installation.
4. When boiler is connected to heating system utilizing multiple zoned circulators, each circulator must be supplied with flow control valve to prevent gravity circulation.
  - Reduced pressure back flow preventer must be present under provisions required by Environmental Protection Agency (EPA).
5. Bypass piping is an option which gives ability to adjust supply boiler water temperature to fit system or condition of installation. This method of piping is not typically required for baseboard heating systems.
  - Method used to protect systems using radiant panels and material they are encased in from high temperature supply water from boiler. See **Figure 3**.
  - Method used to protect boilers from condensate forming due to low temperature return water. Generally noticed in large converted gravity systems or other large water volume systems. See **Figure 4**.
  - Method used to protect boilers from condensate forming as well as protecting heating system from high water temperature. See **Figure 5**.
6. When using bypass piping, adjust valves A and B until desired system temperature is obtained.
7. Bypass loop piping must be same size piping for supply and return.
8. Connect supply and return piping as suggested in **Figure 6**, when boiler is used in connection with refrigerated systems:

**Figure 3**

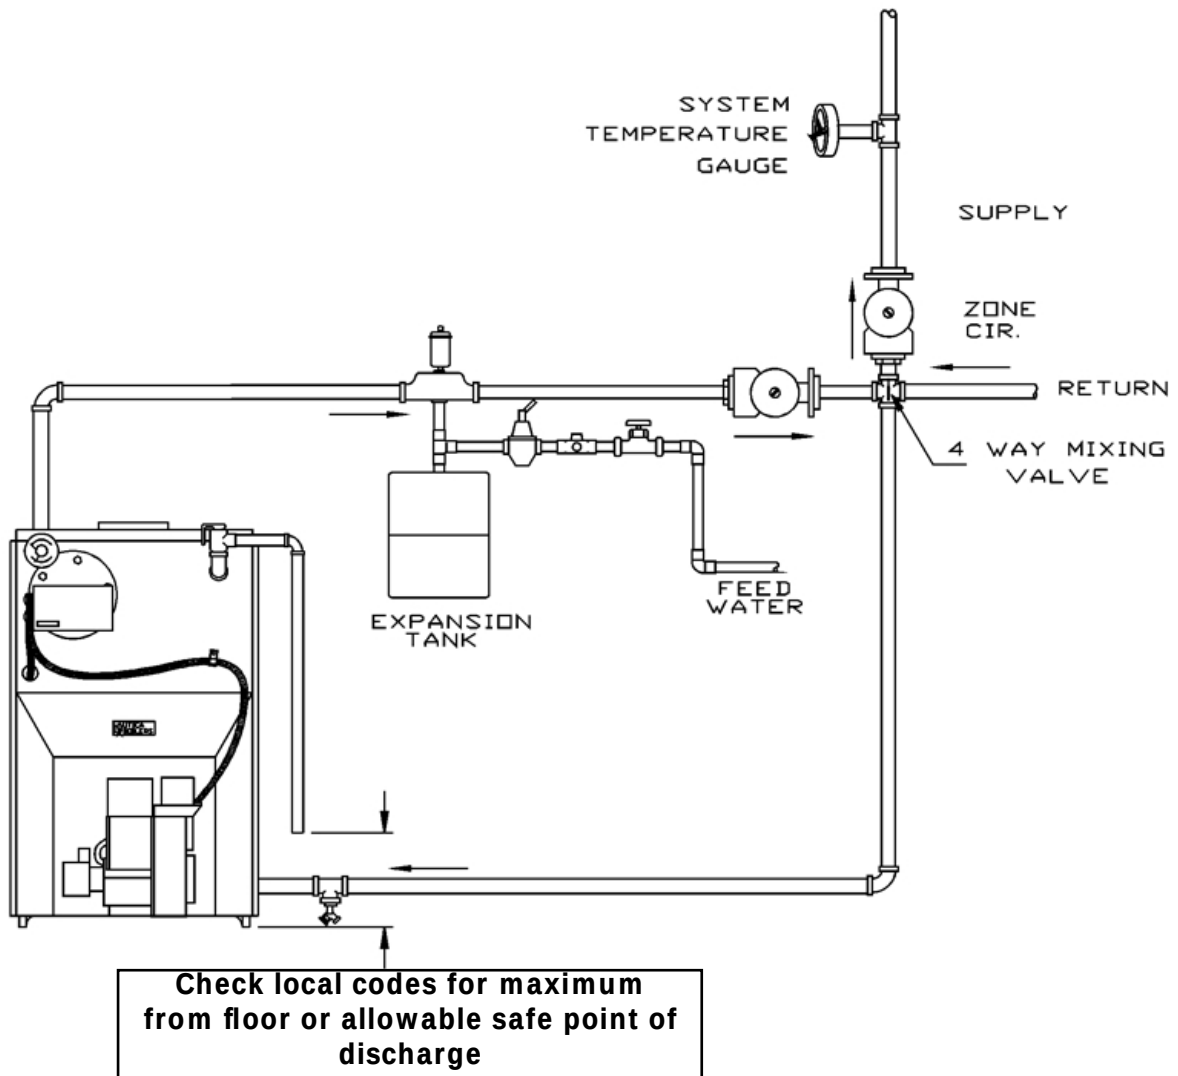

## CONNECTING SUPPLY AND RETURN PIPING

Figure 4


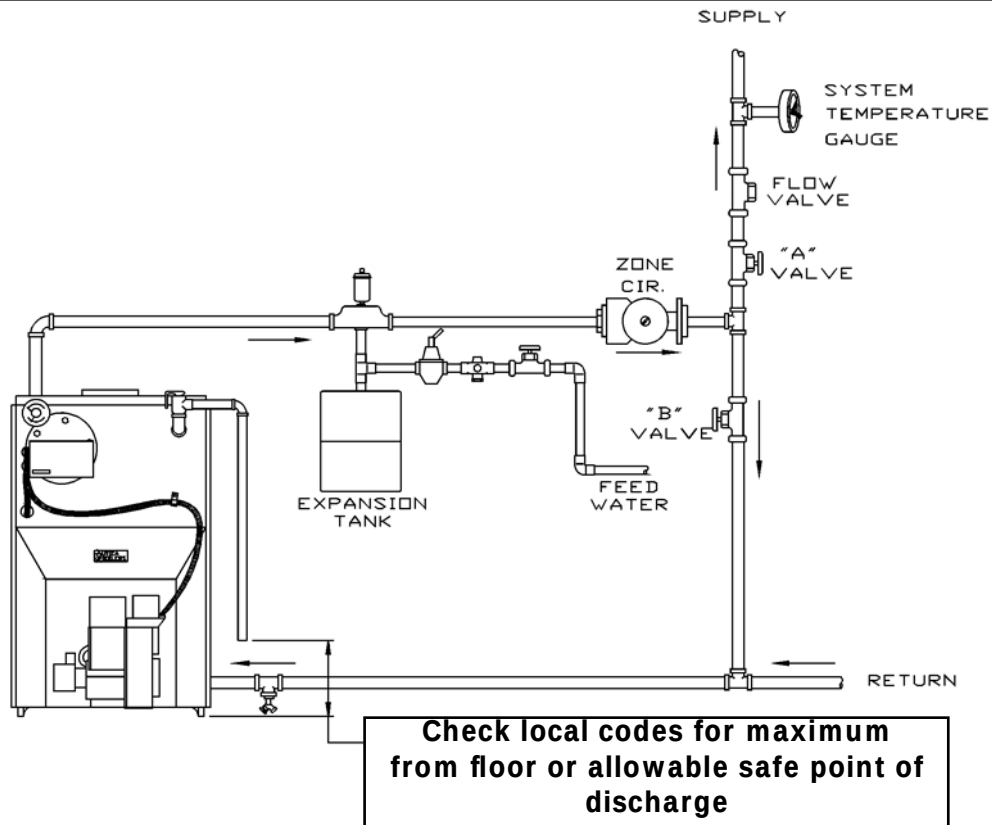


Figure 5

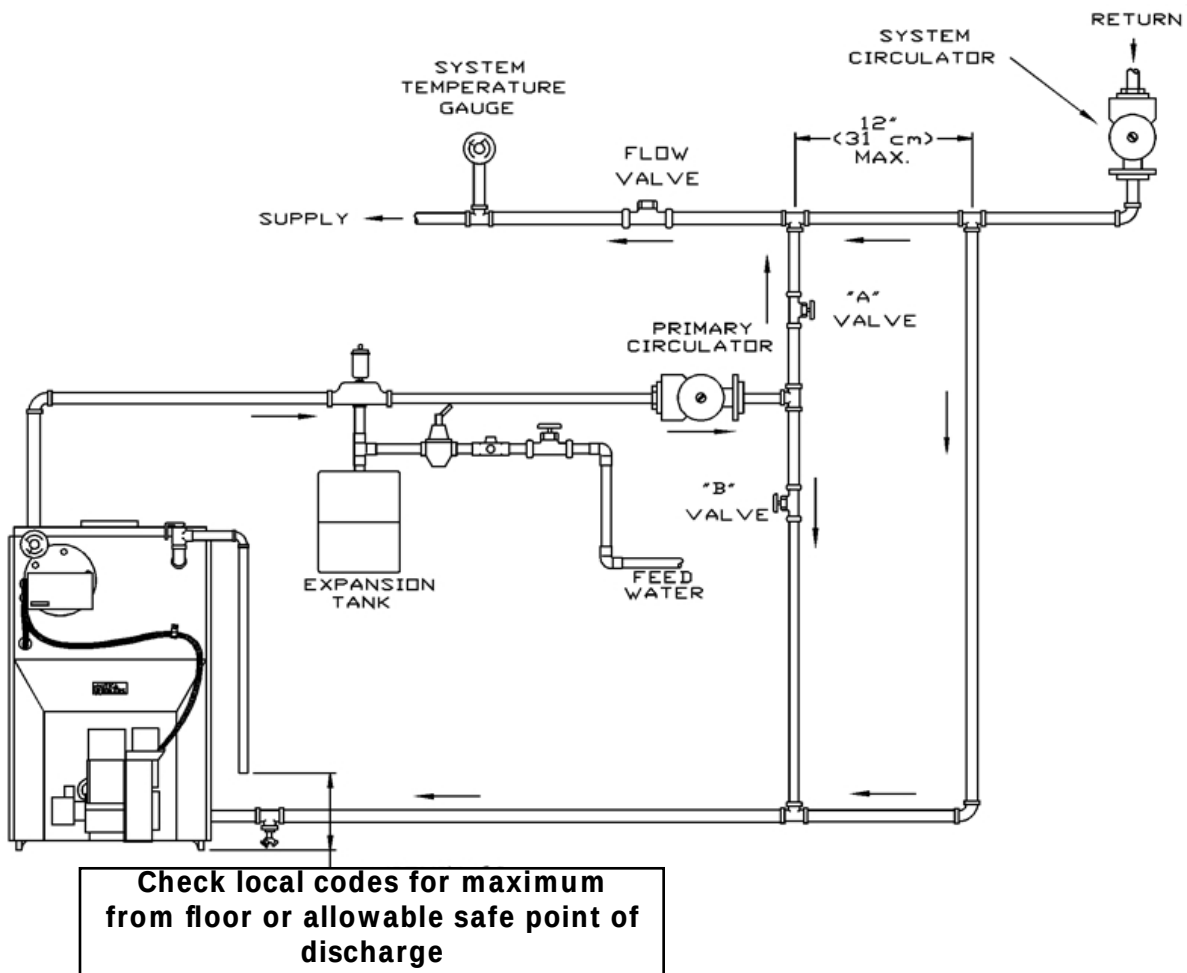

## CONNECTING SUPPLY AND RETURN PIPING

- A. Chilled medium must be in parallel with the boiler.
  - B. Use appropriate valves to prevent chilled medium from entering heating boiler.
9. During heating cycle open valves A and B, close valves C and D.
10. During heating cooling cycle open valves C and D, close valves A and B.
- A. Maintain minimum clearance of one inch to hot water pipes.

In air handling units where they may be exposed to refrigerated air circulation, boiler piping system **MUST** be supplied with flow control valves or other automatic means to prevent gravity circulation of boiler water during cooling cycle.


### **WARNING**

Burn and scald hazard. Safety relief valve could discharge steam or hot water during operation.

#### **Install discharge piping from safety relief valve.**

- Use 3/4" or larger pipe.
- Use pipe suitable for temperatures of 375°F (191°C) or greater.
- Individual boiler discharge piping shall be independent of other discharge piping.
- Size and arrange discharge piping to avoid reducing safety relief valve relieving capacity below minimum relief valve capacity stated on rating plate.
- Run pipe as short and straight as possible to location protecting user from scalding and properly drain piping.
- Install union, if used, close to safety relief valve outlet.
- Install elbow(s), if used, close to safety relief valve outlet and downstream of union (if used).
- Terminate pipe with plain end (not threaded).

Figure 6

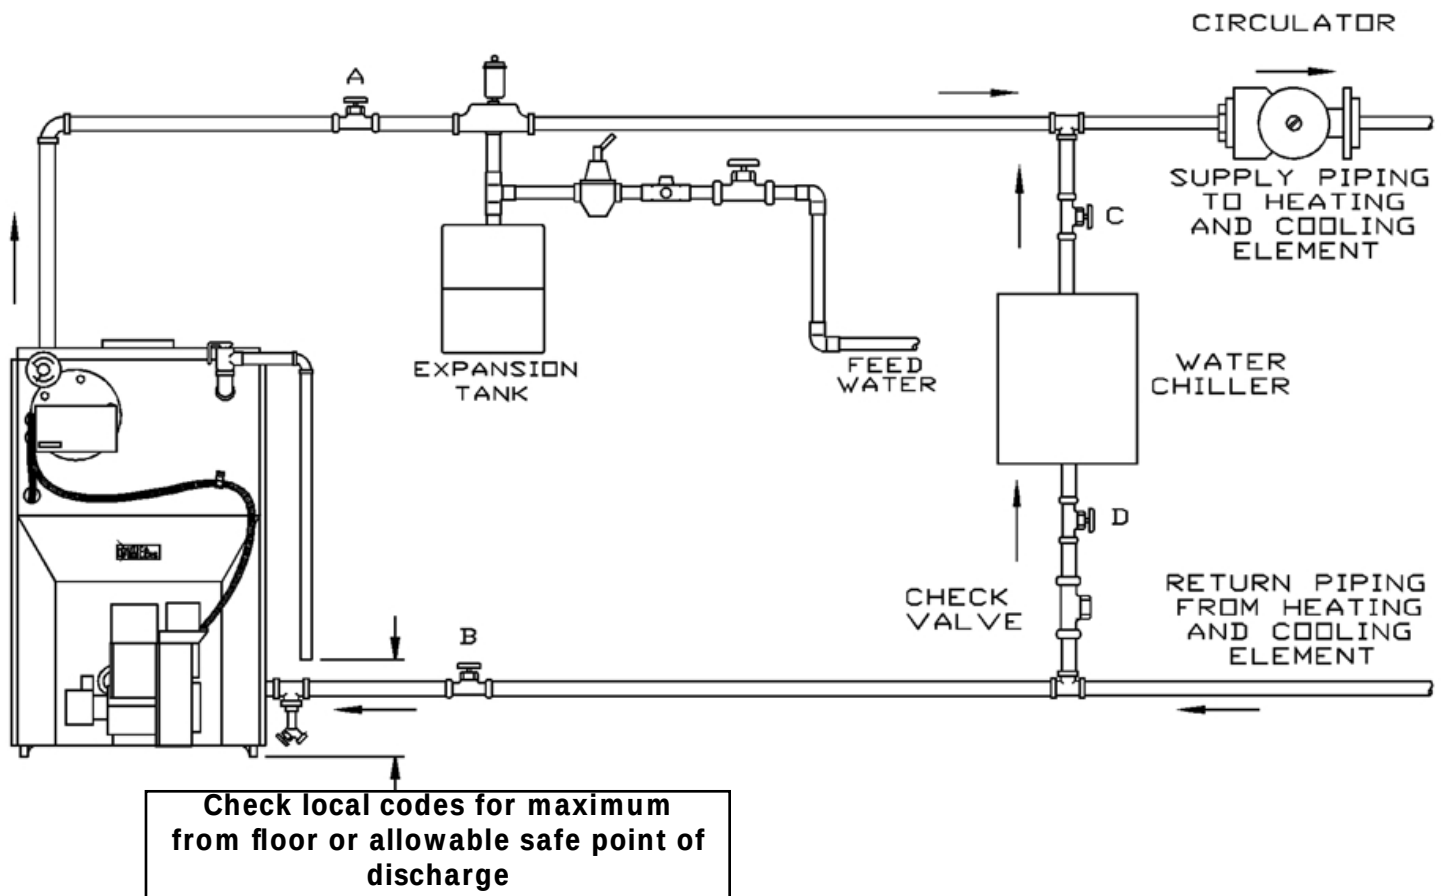



**⚠ DANGER**

Burn, scald hazard. Water temperatures exceeding 125° F will cause severe burns instantly or death by scalding.

- An automatic mixing valve must be installed on the outlet of the domestic coil. Installation must comply with the valve manufacture's recommendations, and instructions.
- Do not remove the bolts or limit at the time of installation.
- Pipe in accordance with the installation manual.
- Due to varying water conditions, an adjustable flow restrictor must be installed in the cold water inlet of this coil.

**Figure 7 Recommended Piping For Boilers Equipped With A P3 Or T4 Tankless Heater**

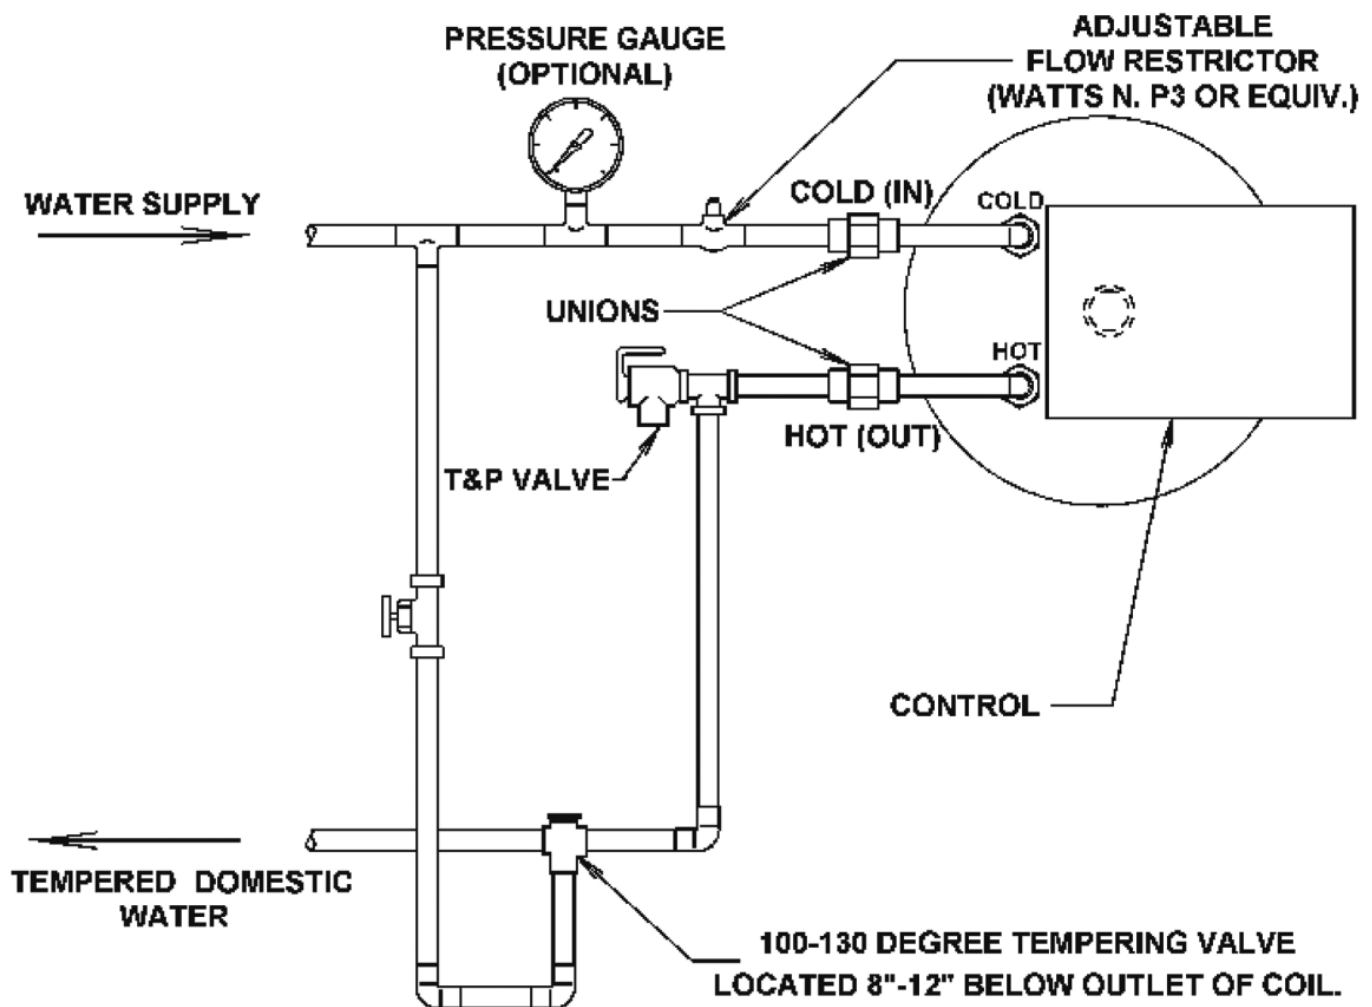


Figure 8 - Optional Location For Air Vent


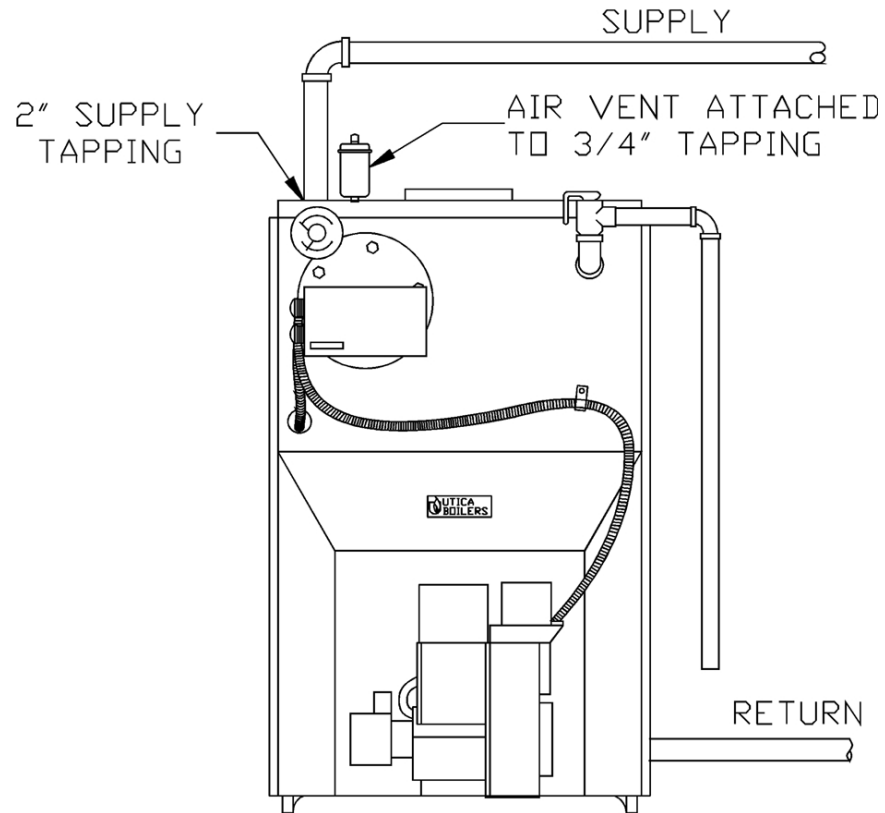


Figure 9 - Optional Location For Expansion Tank (Non-Diaphragm Type)

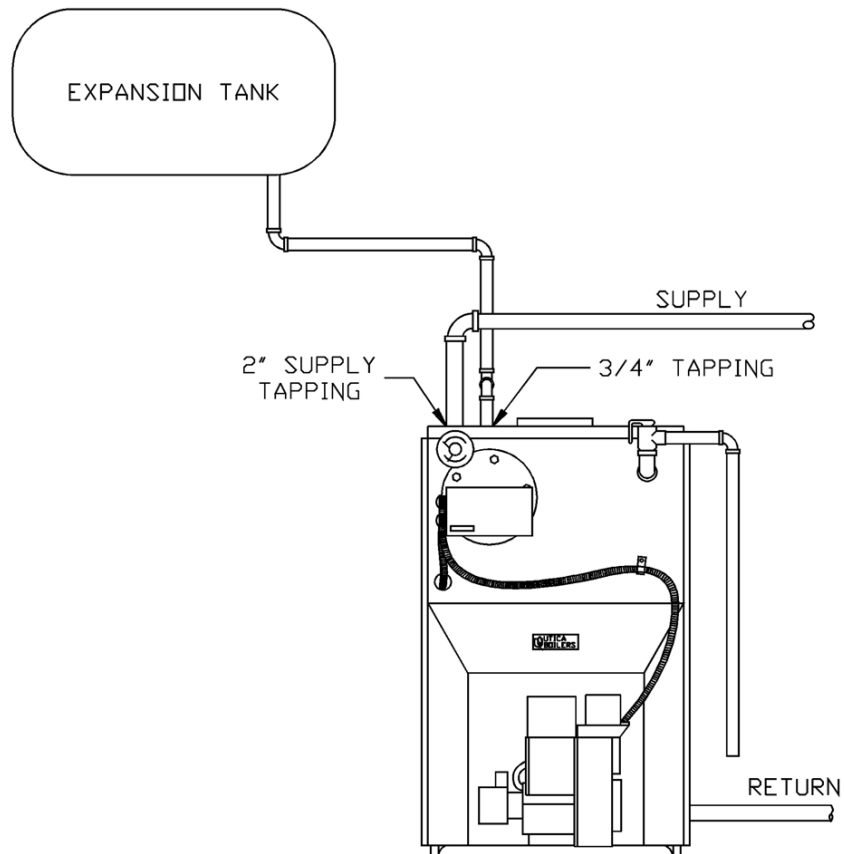


## OIL TANK AND PIPING

**Install Oil tank and piping** in accordance with the National Board of Fire Underwriters and in absence of such regulations in accordance with authority having jurisdiction. Oil storage tank, vent, fill pipe and caps should be in accordance with the authority having jurisdiction.


- A. In no case should vent pipe be smaller than 1-1/4" I.P.S.
  - B. Fill pipe should not be less than 2" I.P.S.
- Suction line from tank to burner should be one continuous piece of tubing to prevent air entering line. Suction line, must be 3/8" O.D. copper tubing for runs of 50 feet or less, and 1/2" O.D. for longer runs.
  - Oil return line, same size as suction line, must be used on any installation where bottom of tank is below fuel unit of burner.
  - Oil lines should be buried or otherwise protected from mechanical injury.
  - Flare fittings on all oil lines are recommended.
  - Compression fittings on suction line often allow air to be drawn into fuel pump, making it difficult to maintain oil pressure at nozzle.

- Do not run overhead fuel lines from tank to oil burner.
- Fuel pump connections and by-pass should be made according to instructions attached to fuel pump. If tank is more than 20' from the boiler, a two stage fuel unit should be installed in place of single stage pump supplied as standard equipment with burner. Make certain rotation and speed are same and pump is suitable for burner horsepower rating.
- Oil line filter and shut-off valve should be installed in suction line.
- Shut-off valves should be installed in both suction and return lines at burner for convenience in servicing burner.
- Allow extra tubing at burner so burner may be removed from boiler for cleaning without disconnecting tubing. (See **Figures 10 & 11**).
- A UL approved flexible oil line may be used.

**Figure 10 - Typical Installation Single Pipe Oil System**

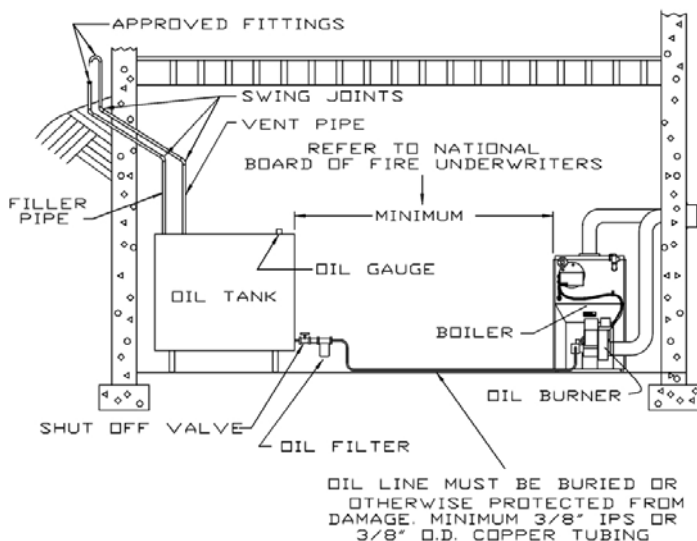


**Figure 11 - Typical Installation Two Pipe Oil System**

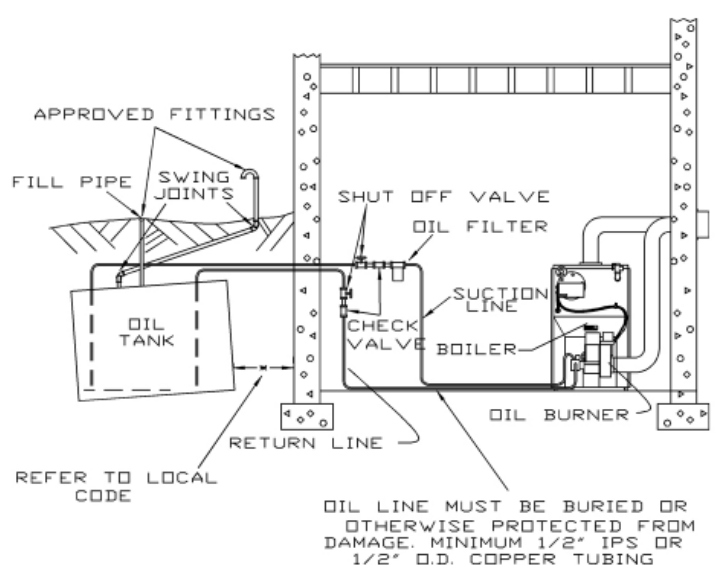

**Install electrical wiring in accordance with requirements of authority having jurisdiction, or in the absence of such requirements, NFPA 70: Electrical Code.**

- Separate electrical circuit should be run from entry box with fused disconnect switch in this circuit.
- See wiring diagrams in **Figures 12 & 13** for suggested circuitry and field wiring see Normal Sequence of Operation in this manual.
- Wiring for zone valve installations are furnished with zone valve packages.


**Figure 12 - Wiring Diagram For Oil Fired Boilers Less Tankless Heater And Beckett Burner**

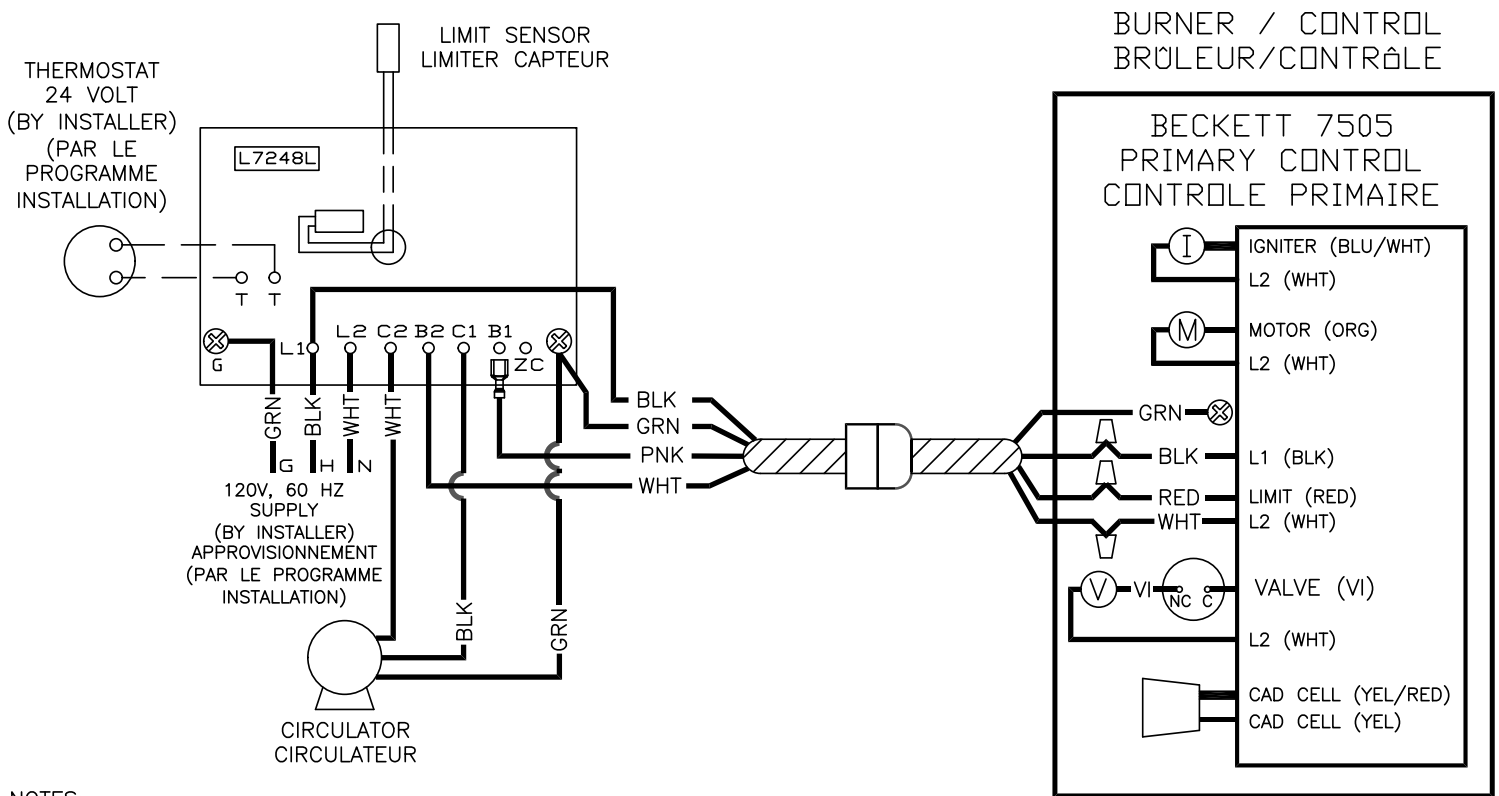

**NOTES:**

IF ANY OF THE ORIGINAL WIRING SUPPLIED WITH THE BOILER IS REPLACED, IT MUST BE REPLACED WITH LIKE WIRE SIZE AND TYPE OF INSULATION OR EQUIVALENT. (SI DES FILS ORIGINALEMENT FOURNIS AVEC LA CHAUDIÈRE SONT REMPLACÉS, ILS DOIVENT ÊTRE REMPLACÉS PAR DES FILS DE MÊME GROSSEUR ET DE MÊME TYPE D'ISOLANT OU L'ÉQUIVALENT.)

**Figure 13 - Wiring Diagram For Oil Fired Boilers With Tankless Heater And Beckett Burner**

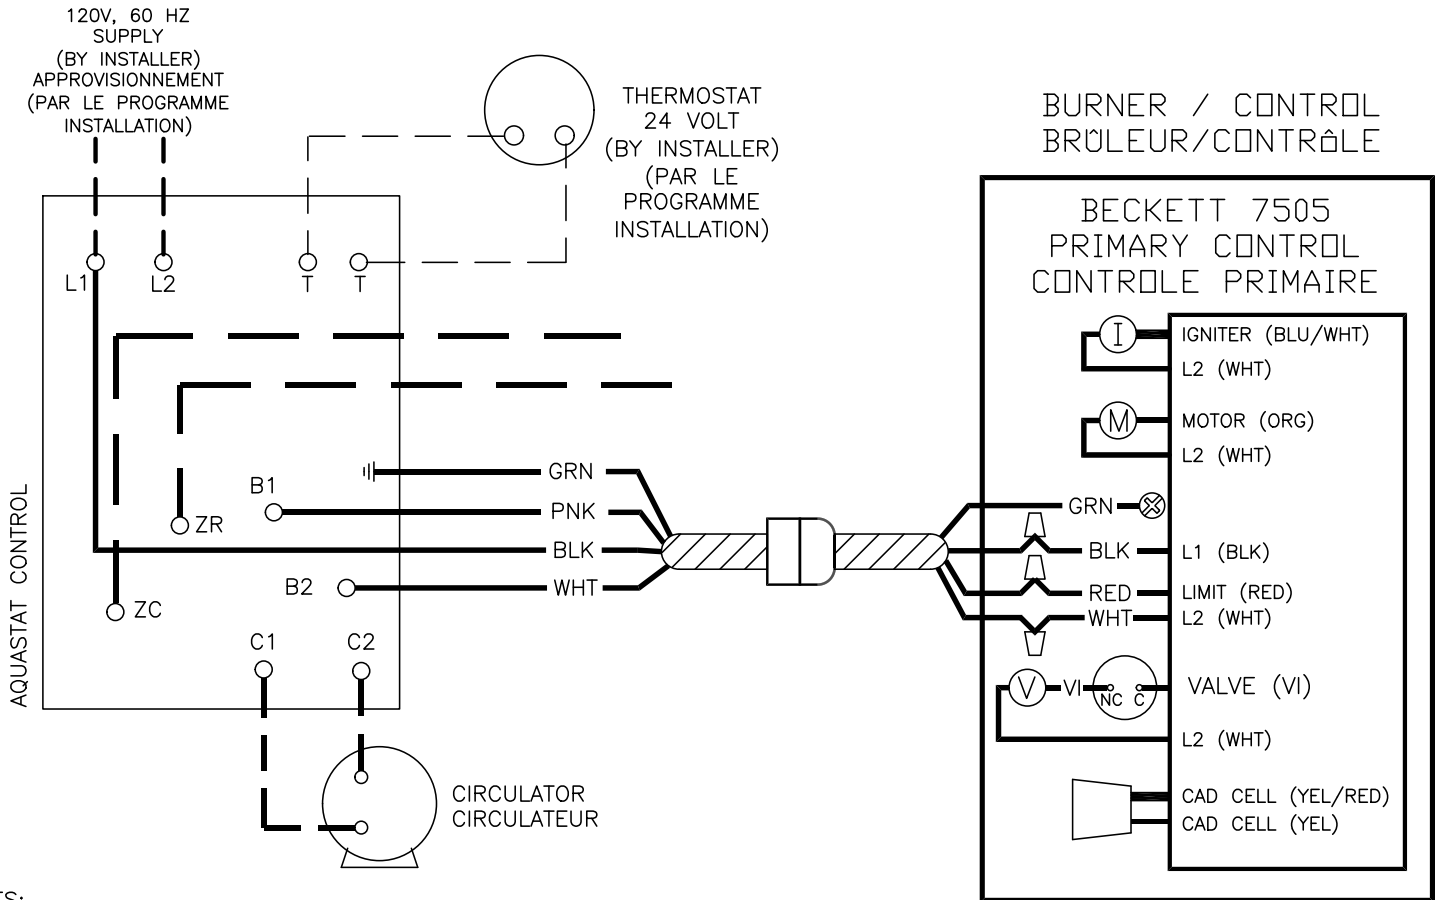

**NOTES:**

IF ANY OF THE ORIGINAL WIRING SUPPLIED WITH THE BOILER IS REPLACED,  
IT MUST BE REPLACED WITH LIKE WIRE SIZE AND TYPE OF INSULATION OR EQUIVALENT.  
(SI DES FILS ORIGINALEMENT FOURNIS AVEC LA CHAUDIÈRE SONT REMPLACÉS,  
ILS DOIVENT ÊTRE REMPLACÉS PAR DES FILS DE MÊME GROSSEUR ET DE  
MÊME TYPE D'ISOLANT OU L'ÉQUIVALENT.)

## ELECTRICAL WIRING

### Thermostat Installation

1. Install thermostat on inside wall about four feet above floor.
2. Never install thermostat on outside wall.
3. Do not install thermostat where it will be affected by:
  - A. Drafts
  - B. Hot or cold pipes
  - C. Sun light
  - D. Lighting fixtures
  - E. Television sets
  - F. A fireplace or chimney
4. Check thermostat operation by raising and lowering thermostat as required to start and stop burner.
5. Instructions for final adjustment of thermostat are packaged with thermostat (adjusting heating anticipator, calibration, ect.).

## SEQUENCE OF OPERATION

### Sequence of Operation - Non-Tankless

- Thermostat calls for heat.
- Circulator turns on.
- Limit checks boiler water temperature. Burner ignition delayed until limit determines call for heat cannot be met by residual heat in boiler and heat distribution system. See limit literature for additional information.
- Burner and circulator operation continues until thermostat stops call for heat.

### Sequence of Operation - Tankless

- Thermostat will activate, completing circuit to limit control.
- Circulator motor starts and power is switched to limit. If limit circuit is closed burner motor circuit is energized.
- Burner motor starts prepurge and approximately 15 seconds after solenoid valve opens and ignition system is activated, ignition will begin.
- In event boiler water temperature exceeds high limit setting on boiler mounted limit control; Power will be interrupted between limit control and ignition system. Burner motor will continue to run in post purge mode for approximately 2 min. or until water temperature drops below high limit setting. Circulator will continue to operate under this condition until thermostat is satisfied.
- When thermostat is satisfied power is interrupted to boiler mounted limit control and burner will run in post purge mode for 2 minutes.

Venting system should be inspected at start of each heating season.

- Check vent pipe from boiler to termination cap for signs of deterioration by rust or cracked silicone joints. Repair if necessary.
- Lever of safety relief valve, shown in Figure 17, on page 18, on boiler should be operated periodically to make sure it is functioning properly. Pressure relief valve should open before water pressure exceeds 30 psi. reading on gauge. If pressure is exceeded and pressure relief valve leaks water when boiler is operating at normal pressures, immediately replace. Corrosion can build up rapidly at valve seat preventing it functioning as safety device.

**Start-up and adjustment of oil burner** (See oil burner instructions for nozzle and electrode setting).

- A. Check oil burner nozzle to make certain it is tight in adapter. Burner mounting bolts should be tight.
- B. Check electrode setting, as they may have been jarred out of position during transportation.
- C. Lubricate burner motor and circulator motor if required. Some circulators are water lubricated and do not require oiling.
- D. Set room thermostat to call for heat.
- E. Open all oil line valves.
- F. Turn service switch on. Burner should start.
- G. On one pipe fuel systems only, vent pump as soon as burner starts. Allow oil to run until all traces of air in the suction line disappear.
- H. Turn "OFF" burner and install pressure gauge in port on pump.
- I. Start burner again and check oil pressure for 140 psi. Adjust if necessary.

Instruments are only reliable method to determine proper air adjustments. Improperly adjusted burner causes soot and high fuel bills because of incomplete combustion of fuel oil. This in turn may require excessive boiler maintenance, service costs. Consult competent service mechanic to make proper adjustments with smoke tester, CO<sub>2</sub> indicator and draft gauge. Bacharach or Dwyer test kits include these instruments.

- 1/4" diameter slot is provided in inspection cover plate to take draft reading in combustion chamber.
- 3/8" hole is provided in vent appliance adapter to take draft, CO<sub>2</sub>, smoke, and temperature readings.
- Adjust air dial on oil burner to obtain trace of smoke. Measure CO<sub>2</sub> at this point and increase air setting until CO<sub>2</sub> = 1-1.5% lower than reading at trace point.
- Check draft over fire and in vent, normal readings will be positive (+.01 Over-fire & +.02 In Vent) W.C.

Table page 17 is provided as guideline for initial start-up. Final adjustments MUST be made using combustion instruments as previously mentioned.

## INSTRUCTIONS TO OBTAIN PROPER OPERATION OF THE BOILER-BURNER UNIT

**Check Safety Control Circuit** after burner adjustments have been made for satisfactory performance.

### RIELLO SETTINGS

| Boiler No. | Burner No. | Air Damp | Turb. Setting | Pump Pressure | Head   | Nozzle Furnished |
|------------|------------|----------|---------------|---------------|--------|------------------|
| SW3065     | BF3        | 4.00     | 2             | 150 PSI       | 6 SLOT | .60 80 W         |
| SW4100     | BF5        | 4.25     | 3             | 150 PSI       | 9 SLOT | .85 80 W         |
| SW5125     | BF5        | 5.50     | 4             | 150 PSI       | 9 SLOT | 1.10 60 B        |

### BECKETT SETTINGS

| Boiler No. | Burner No. | Air Damp | Pin | Pump Pressure | Head  | Nozzle Furnished |
|------------|------------|----------|-----|---------------|-------|------------------|
| SW3065     | AFII 100   | 3.25     | 3   | 140 PSI       | HLX 6 | .60 45B          |
| SW4100     | AFII 100   | 7.50     | 5   | 140 PSI       | HLX 6 | .85 45B          |
| SW5125     | AFII 150   | 5.00     | 8   | 140 PSI       | HLX 6 | 1.10 45B         |

A. **HIGH LIMIT CONTROL:** remove cover and note temperature setting. See figure 15 on page 15. With burner operating, decrease this setting to minimum point. When boiler water temperature exceeds this set point, high limit switch will open, shutting off power to oil burner and starting post purge cycle for approximately 2 minutes. Return setting to desired high limit point. Burner should restart.

B. **PRIMARY CONTROL AND FLAME SENSOR:**

To Check:

- Flame failure - simulate by shutting off oil supply with hand valve while burner is on. 15 seconds after flameout, safety switch locks out, ignition stops, motor stops and oil valve closes. To restart, open oil supply valve and reset safety switch.
- Ignition failure - with burner off, unplug electrical disconnect on burner harness. Disconnect one wire from transformer and put wire nut on disconnected wires. Restore power and run through start-up procedure, safety switch should lockout as flame failure. Reconnect wires after this procedure is complete.
- Power failure - Turn off main power supply switch while burner is operating. When burner stops, restore power and burner should start.

If operation is not as described as above, check wiring and controls.



## PREVENTIVE MAINTENANCE

**Preventive Maintenance** of oil fired boiler reduces operating costs. Boiler and vent pipe should be inspected for accumulation of soot or scale deposits periodically but at least once every year before start of each heating season. When soot is present on section walls and flueways, improper combustion will result, causing additional sooting and scaling until flueways are completely closed. To remove soot and scale from flueways, remove top jacket panel, top clean-out plate, and open burner swing door. (**Figure 14**).

**Periodic Inspection** and tightening of tankless heater/cover plate bolts will reduce risk of leaks.

### INSTRUCTIONS FOR OPENING AND CLOSING BURNER SWING DOOR

#### Instructions for Opening Burner Swing Door

1. Turn off power to boiler.
2. Allow boiler to cool down.
3. Disconnect power cable at factory supplied burner electrical disconnect. See **Figure 15**.
4. Loosen screws on sides of lower front jacket panel. See **Figure 15**.
5. Pull bottom part of lower front panel forward.
6. Lift lower front panel up and off boiler. See **Figure 15**.
7. Close oil valve. See **Figures 10 and 11**.
8. Disconnect oil line from burner.

#### NOTICE

Do not try to swing door with oil line attached

9. Disconnect inlet air pipe from side of burner.
10. Remove nut from swing door stud on right hand side of door.
11. Swing open burner and door to left.
12. Using flue brush, brush soot and scale into combustion space where it can be removed through swing door opening.

#### NOTICE

Use caution when vacuuming in the chamber area. Damage to chamber could result.


Recommend to replace nozzle at start of each heating season. Lubricate burner motor and circulator motor - if required - with few drops of good grade light motor oil. Do not over oil. Have competent service person service burner, check controls and check electrodes for carbon or cracks in insulators. Burners should be adjusted to produce conditions shown in Start-up and Adjustment of Oil Burner procedure.

#### Instructions for Closing Burner Swing Door


1. Swing burner and door to right until insulation is slightly compressed and stud is exposed.
2. Attach nut to stud and tighten it until built in stop contacts mounting door.

3. Replace oil line to burner.
4. Replace inlet air pipe.
5. Replace lower jacket panel, and tighten screws.
6. Connect power cable at factory supplied burner electrical disconnect.
7. Turn on power to boiler.
8. Bleed oil line.

**Figure 14**

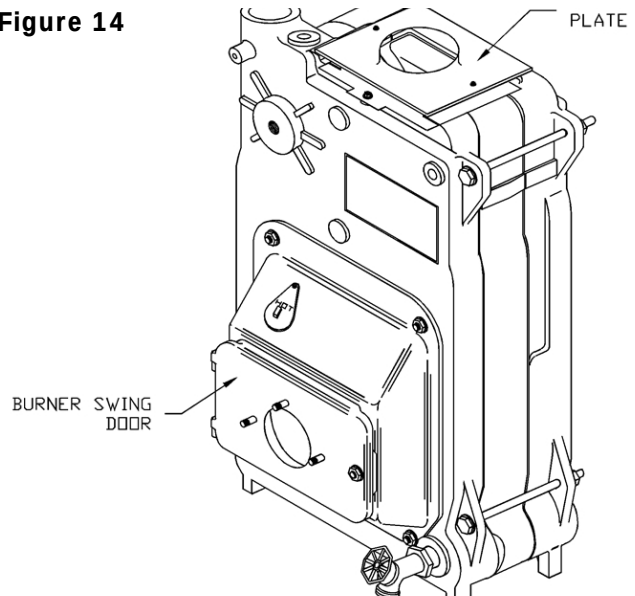

**Figure 15**

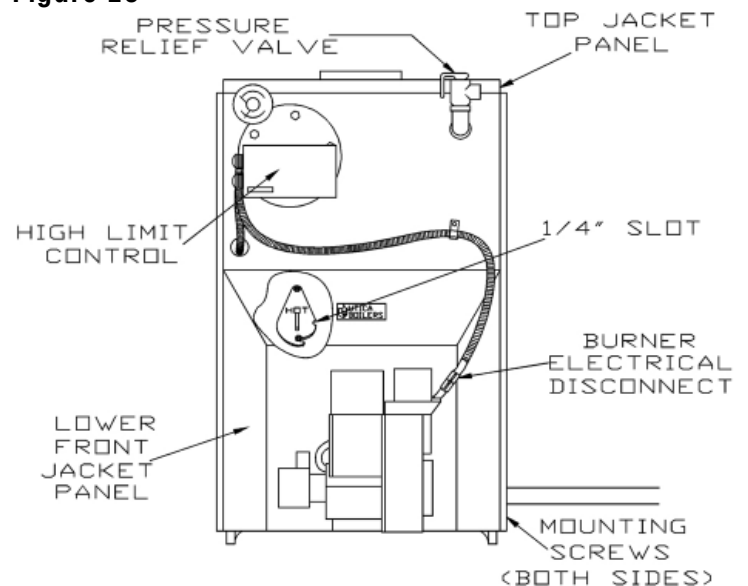

## RATINGS AND DATA



### RATINGS AND DATA

| BOILER<br>MODEL<br>NUMBER | OIL BURNER INPUT <sup>(1)</sup> |     | HEATING<br>CAPACITY | AHRI NET<br>RATINGS <sup>(2)</sup> | A.F.U.E. |
|---------------------------|---------------------------------|-----|---------------------|------------------------------------|----------|
|                           | G.P.H.                          | MBH | MBH*                | WATER<br>MBH                       | RATING   |
| SW3065                    | .65                             | 91  | 78                  | 68                                 | 85.0     |
| SW4100                    | 1.00                            | 140 | 120                 | 104                                | 85.0     |
| SW5125                    | 1.25                            | 175 | 150                 | 130                                | 85.0     |

**NOTES:**

1. AHRI burner input is based on an oil heating value of 140,000 Btu/gal.
2. Net AHRI Water Ratings shown are based on a piping and pickup allowance of 1.15. Consult manufacturer before selecting boiler for installations having unusual piping and pickup requirements, such as intermittent system operation, extensive piping.
3. 120 Volts, 15 Amps, & 60 Hz. required to operate this boiler.

**STANDARD EQUIPMENT:** Crated Boiler, Flush Jacket, Oil Burner, Target Wall/Liner, Circulator-1 1/4", Safety Relief Valve, Temperature Pressure Gauge, Drain Valve, Wiring Harness, Burner Electrical Disconnect, Plastic Cover, Supply Tapping 2", Return Tapping 1 1/4", High Limit and Circulator Control, Primary Control. For Tankless Heater Units-add Tankless Hot Water Coil, Flow Restrictor and Combination High Limit, Low Limit, and Circulator Control.

### TANKLESS WATER HEATER CAPACITIES

| BOILER<br>MODEL<br>NUMBER | INPUT<br>RATE<br>G.P.H. | TANKLESS<br>HEATER<br>NUMBER | TANKLESS<br>HEATER CAPACITY<br>INTERMITTENT DRAW<br>G.P.M. | BOILER<br>WATER<br>CONTENT<br>GALS. |
|---------------------------|-------------------------|------------------------------|------------------------------------------------------------|-------------------------------------|
| SW3065                    | .65                     | P3                           | CAPACITY AVAILABLE ON REQUEST                              | 10.5                                |
| SW4100                    | 1.00                    | T4                           | 3.25                                                       | 13.5                                |
| SW5125                    | 1.25                    | T4                           | 3.75                                                       | 16.5                                |

## SERVICE CHECK LIST

- |                                                                                                                                                                                                                                                                                                                                                                                                                               |                                                                                                                                                                                                                                                                                                                                                                                                                                    |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|
| <input type="checkbox"/> Pump Pressure/Vacuum<br><input type="checkbox"/> Line Voltage/Motor Amps<br><input type="checkbox"/> Smoke Test<br><input type="checkbox"/> Draft Over-fire/In Flue<br><input type="checkbox"/> CO <sub>2</sub> or O <sub>2</sub><br><input type="checkbox"/> Flue Gas Temperature<br><input type="checkbox"/> Proper Light-Off (Hot & Cold)<br><input type="checkbox"/> Controls and Safety Devices | <input type="checkbox"/> Inspect Chimney and Flue pipe<br><input type="checkbox"/> Inspect and Clean Appliance<br><input type="checkbox"/> Inspect Oil Line - Size/Leaks<br><input type="checkbox"/> Inspect Electrical Connections<br><input type="checkbox"/> Install New Filter<br><input type="checkbox"/> Room Make-up Air<br><input type="checkbox"/> Electrode setting<br><input type="checkbox"/> Nozzle-Size, Angle, Type |
|-------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------------|

Measure with Instruments and Record results on chart provided below.

| Date | Nozzle |       |      | Pump<br>Pressure<br>PSI | Smoke<br>NO. | Draft |     | CO <sub>2</sub> or O <sub>2</sub> | Flue<br>Temperature<br>°F |
|------|--------|-------|------|-------------------------|--------------|-------|-----|-----------------------------------|---------------------------|
|      | Size   | Angle | Type |                         |              | O.F.  | INF |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |
|      |        |       |      |                         |              |       |     |                                   |                           |



**SW**

OIL FIRED DIRECT EXHAUST  
CAST IRON BOILER

